



morphy richards

**3 Year
Guarantee***

*Upon registering your product at morphyrichards.co.uk

THERMOGRILL

Contact Grill

with temperature probe



Model No.

485501

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Read these instructions carefully and retain for future reference.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and it's cord out of reach of children less than 8 years.
- If the supply cordset is damaged, contact Morphy Richards for advice.





HEALTH AND SAFETY

- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.
- **WARNING:** Misuse can cause personal injury.





HEALTH AND SAFETY

LOCATION

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat, heat resistant surface.
- Do not use the appliance outdoors or near water.
- **IMPORTANT:** Do not use too close to curtains, draperies, walls, cupboards and other flammable materials.
- **WARNING:** Do not use underneath cupboards.

MAINS CABLE

- The mains cable should reach from the socket to the base unit without straining the connections.
- Do not let the mains cable hang over the edge of the worktop or open space where a child could reach it.
- Do not let the cable run across a cooker or hot area which might damage the cable.
- Never leave the appliance connected to the socket outlet when not in use.

PERSONAL SAFETY

- **WARNING: Do not touch the top of the appliance or other hot parts during or after use, use handles or knobs.**
- To protect against the risk of electrical shock do not put the appliance in water or in any other liquid.
- Do not touch hot surfaces. Use oven gloves or mitt when removing lid or handling hot containers.
- Extreme caution must be used when moving an appliance containing hot food.

OTHER SAFETY CONSIDERATIONS

- Do not switch on the appliance when it is upside down or laid on its side.
- Do not operate with a damaged cable or after the appliance malfunctions or has been damaged in any manner. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended by Morphy Richards may cause fire, electric shock or injury.
- Do not place on or near a hot gas or electric burner.





HEALTH AND SAFETY



**CAUTION!
HOT
SURFACE!**

**PLEASE BE AWARE OF HOT SURFACES
HANDLE WITH CARE**

TREATING SCALDS

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Get medical help quickly.

ELECTRICAL DETAILS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- The power consumption in off mode is 0.3W.
- The product will switch to off mode after the program is finished..
- **WARNING:** This appliance must be earthed.

 




PRODUCT REVIEW



CONTROL PANEL

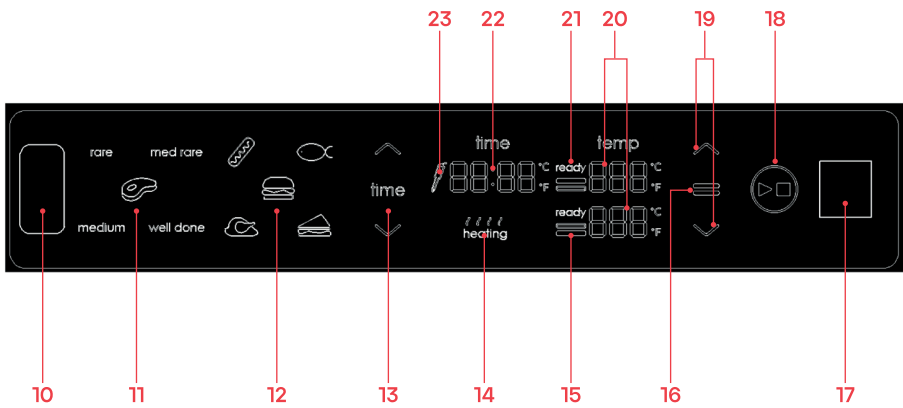



PRODUCT REVIEW

1. Lid Handle
2. Temperature Probe with Magnetic Cover
3. Upper Removeable Non-stick Cooking Plate
4. Lower Removeable Non-stick Cooking Plate
5. Control Panel
6. Upper Grill Plate Release Button
7. Lid Lock and Height Adjustment Knob
8. Oil Drain Spouts
9. Drip Tray
10. Temperature Probe Interface
11. Steak Pre-Sets
12. Menu Pre-Sets
13. Time Increase / Decrease Buttons
14. Heating Indicator
15. Lower Grill Plate and Ready to Cook Indicators
16. Grill Plate Selector Button
17. Lower Grill Plate Release Button
18. Start/Stop/Pause Button
19. Temperature Increase / Decrease Buttons
20. Temperature Displays
21. Upper Grill Plate and Ready to Cook Indicators
22. Time Display
23. Temperature Probe Indicator

BEFORE FIRST USE

- Remove any labels and tags from the product (except rating label).
- Use hot soapy water to wash the non-stick cooking plates with a sponge or dishcloth. **DO NOT** use a scouring pad or other abrasive material as this will scratch the non-stick coating.
- **Note:** During initial use, you may notice a slight odour due to the burning off of manufacturing residue. This is normal, it does not affect the food being cooked and will disappear after a few uses.
- **WARNING:** Burn hazard, use an oven mitt to protect your hand from contact with hot surfaces and steam during grilling. The temperature of accessible surfaces may be very high when the grill is operating.





USING YOUR GRILL

Important: Use of wood or heat-proof plastic utensils are recommended to protect the non-stick cooking surface. Never cut food with a knife on the grill surface.

 
- DO NOT use metal utensils, spatulas, knives or forks.
- For the best results lightly butter the OUTSIDE of the bread or use a spread suitable for cooking.

Important: Ensure the drip tray (9) is fitted to the grill before cooking.

WARNING: The grill gets hot. DO NOT touch the grill plates or outer surfaces while it is in operation or before it has cooled down thoroughly.

LID LOCK AND HEIGHT ADJUSTMENT

- To lift the lid of the grill, slide the lid lock/height adjustment knob (7) to the Open position.
- Depending on the thickness of the food you are grilling the height of the upper grill plate (3) may need adjusting. There are 5 height positions 1 to 5.
- While the lid is lifted, slide the lid lock/height adjustment knob, to the required height position.
- The grill lid can also be opened to 180°. Slide the lid lock/height adjustment knob to the Open position and lift the lid. Hold the handle and press the Push button. Lower the lid until it lays flat.
- When you're ready to store the appliance, slide the lid lock/height adjustment knob to the Lock position, while the lid is closed.

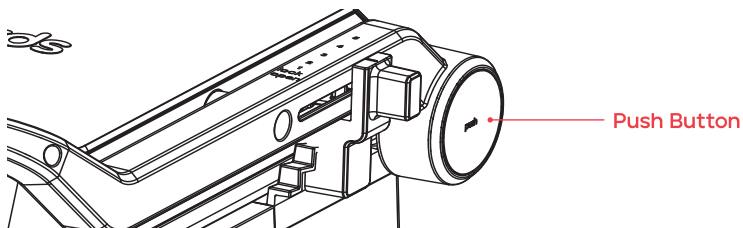


Important: Always use the handle (1) to lift the grill lid.





USING YOUR GRILL

MANUAL OPERATION

- Plug into the mains socket, a beep will be heard, the buttons and indicators will illuminate. The grill is now in standby.
- If none of the buttons are pressed within 20 seconds, the buttons and indicators will go out except the start/stop button (18) which will continue to flash red.
- To set the Temperature press the grill plate selector button (16) once. The upper grill plate indicator (21) will flash. Press the temperature increase button (19) until the desired temperature is reached. Press the grill plate selector button again to confirm the upper grill plate temperature.
- Press the grill plate selector button again (16). The lower grill plate indicator (15) will flash. Press the temperature increase button until the desired temperature is reached. Press the grill plate selector button again to confirm the lower grill plate temperature.
- To set the time, press the time increase button or time decrease button (13) to adjust the time. The cooking time range is 00:00 – 90:00 minutes.
- Press the start/stop/pause button (18) to confirm and turn on the grill.
- The heating indicator (14) illuminates, and preheating starts. The time display area shows .
- After preheating is completed, the display area ready indicators (15, 21) illuminate. If a cooking time has been set, it will be displayed. If there is no set time, --: -- will illuminate. After approximately 10 seconds, the grill starts to countdown.
- Open the lid of the grill using the handle (1) and place the food on the lower grill plate (4) and close the lid.

Note: Follow the instructions in the lid lock and height adjustment (7) section to adjust the upper grill plate (3) height if necessary.








USING YOUR GRILL

- When the cooking time is complete, a beep will be heard and **End** will illuminate for approximately 5 seconds, then change to --:--. If no cooking time is selected the grill will continue to cook at the selected temperature.
- After 60 minutes of continuous cooking/heating, a beep will be heard and the grill will enter standby mode. The start/stop/pause button (18) will flash and then stay illuminated. If no programme etc is selected within 30 minutes of the grill entering standby, it will shutdown and all buttons/indicators will turn off.

Note: If a cooking time has not been selected the grill will cook at the set temperature for 60 minutes before turning off.

Note: The temperature scale can be changed from Celsius  to Fahrenheit  by pressing the temperature increase and decrease buttons (19) simultaneously.

PRE-SET PROGRAMMES

- Plug into the mains socket, a beep will be heard, the buttons and indicators will illuminate. The grill is now in standby.
- If none of the buttons are pressed within 20 seconds, the buttons and indicators will go out except the start/stop/pause button (18) which will continue to flash red.
- Press the pre-set programme button required, then press the start/stop/pause button to confirm and turn on the grill.
- The heating indicator (14) illuminates, and preheating starts, the time display area shows .
- After preheating is completed, the display area ready indicators (15, 21) illuminate. After approximately 10 seconds, the grill will countdown.
- Open the lid of the grill using the handle and place the food on the lower grill plate and close the lid.

Note: Follow the instructions in the lid lock and height adjustment (7) section to adjust the upper grill plate (3) height if necessary.





USING YOUR GRILL

- When the cooking time is complete **End** will illuminate for approximately 5 seconds, then change to - -: - and enter standby mode, the start/stop/pause button will flash.

Note: If a cooking time has not been selected the grill will cook at the set temperature for 60.

Note: The temperature scale can be changed from Celsius $^{\circ}\text{C}$ to Fahrenheit $^{\circ}\text{F}$ by pressing the temperature increase and decrease buttons (19) simultaneously.

Programme	Cooking Time (minutes)
Steak Medium/Rare	3
Steak Medium	4
Steak Medium/Well Done	6
Steak Well Done	8
Chicken Drumstick	11
Sausage	12
Fish	11
Beefburger	10

Note: The temperature and time of the pre-set programmes cannot be changed.





USING YOUR GRILL

USING THE TEMPERATURE PROBE

- Plug into the mains socket, a beep will be heard, the buttons and indicators will illuminate.
- Attach the temperature probe (2) to the grill, ensuring it is securely located. The temperature probe indicator (23) illuminates, and the time display (22) area changes to show the temperature of the probe.
- Place food to be cooked onto the lower grill plate (4) and insert the temperature probe into the thickest part of the food.
- Set the temperature you require the temperature probe to reach by pressing the time Increase or time decrease button (13).
- Next, set the grill plate temperature. Press the grill plate selector button (16) once. The upper grill plate indicator (21) will flash. Press the temperature increase button (13) until the desired temperature is reached. Press the grill plate selector button again to confirm the upper grill plate (3) temperature.
- Press the grill plate selector button again, the lower grill plate indicator (15) will flash. Press the temperature increase button (19) until the desired temperature is reached. Press the lower grill plate selector button again to confirm the lower grill plate temperature.
- Then press the start/stop/pause button (18) to confirm and turn on the grill.
- The heating indicator (14) illuminates, and cooking starts.
- When the temperature probe reaches the set temperature, beeps will be heard.

Note: The grill DOES NOT switch off automatically when using the temperature probe.

Note: When using the temperature probe, the time function cannot be used.

Important: When using the temperature probe DO NOT remove it from the appliance until it has completely cooled.





HINTS & TIPS

- Meat can be used chilled from the fridge, but do not use frozen meat.
- Make sure all frozen ingredients are thoroughly defrosted before use.
- Ingredients should be evenly distributed across the grill.

CARE AND CLEANING

Important: The appliance must be unplugged from the mains outlet before cleaning.

- Allow the unit to cool completely before removing the grill plates and temperature probe.
DO NOT remove while the appliance is hot.
- Press the grill plate release buttons (6, 17) to remove the grill plates. The upper grill plate (3) will fall forwards.
- Clean the outside of the grill with a warm damp cloth using a little mild detergent if needed.
- Using hot soapy water with a sponge or dishcloth, clean the surface of the grill plates (3, 4). Do not use abrasive cleaners or detergents. Do not use steel wool pads.
- Dispose of any fats or liquids that have accumulated in the drip tray (9) and wash with warm soapy water.
- Wipe the temperature probe spike (2) with a warm damp cloth and rinse under running warm water.


Important: Never immerse the main Unit, power cable, plug or temperature probe in water or any liquid.

NOT SUITABLE FOR DISHWASHER CLEANING.





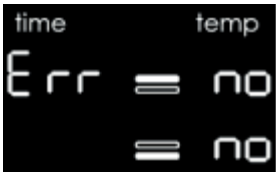


TROUBLESHOOTING

Problem	Possible Cause	Solution
Table Grill doesn't switch on.	Not plugged in.	Check the plug is in its socket and the switch is in the 'on' position.
	Control unit not fitted properly.	Re-fit the control unit.
	Plug itself or the socket is faulty.	Check this by plugging the table grill into another socket.
	Temperature control dial is not at the correct setting.	Select cooking temperature.
Food Sticks to the cooking surface.	Food is burnt to the grill.	Adjust the temperature dial to the correct cooking temperature.
	Cooking temperature is too high.	Reduce to a temperature suitable for the food.
Food is not browning/ cooking.	Cooking temperature is too low.	Adjust the temperature dial to the correct cooking temperature.
If error code shows.	 <p>The image shows a digital display with two rows. The top row has 'time' on the left and 'temp' on the right. Below 'time' is 'Err' followed by 'no'. Below 'temp' is 'no'.</p>	Contact Customer Service.





TROUBLESHOOTING

If error code shows.		Contact Customer Service.
If error code shows.		Contact Customer Service.
If error code shows.		Contact Customer Service.

SPARE PARTS

Part Number	Description	Qty per Product	Key Number
03030	Removeable Grill Plate (complete with element)	2 (sold as a pair)	3, 4
03031	Temperature Probe with magnetic cover	1	2
03032	Drip Tray	1	9





CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee, scan the QR code or register online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





GR485501MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

